AKEEYO

AKY-710S

PRO Motorcycle/Bike CAMERA

User Manual Ver 1.03

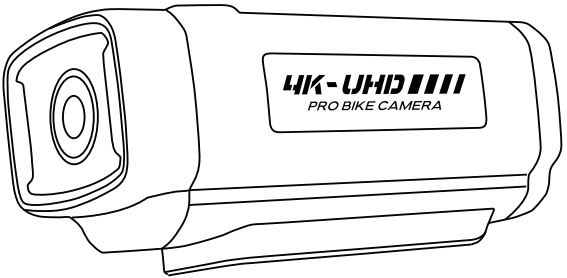

We appreciate your purchase of our product. Thank you very much.

Before use, please review this user manual.

If you have any questions, please contact our support center

Contact Us

help@akeeyo.com

www.akeeyo.com(Global)

Facebook

English/日本語/中文

English.....E-01-25
日本語.....J-01-29
中文.....C-01-25

contents

Precautions for safe use ..... 【E-03】
Correct use of lithium-ion batteries ..... 【E-04】
The names of each part ..... 【E-05】
Bicycle version 710S Accessories ..... 【E-06】
Accessory installation for motorcycle version ..... 【E-07-08】
Accessory installation for Bicycle version ..... 【E-09】
About Memory cards ..... 【E-10】
Specifications ..... 【E-11】
Basic Operations ..... 【E-12-13】
Video function ..... 【E-14】
Introduction to WiFi and APP ..... 【E-15-22】
Setting items in APP ..... 【E-23】
Reproduction of recorded images/photographs ..... 【E-24】
Reset ..... 【E-25】
Version Update ..... 【E-26】
Troubleshooting ..... 【E-27】
Disclaimer ..... 【E-28】
Return packing list ..... 【E-29】

Precautions for safe use

The following headings are used to ensure safe and efficient handling. Please fully understand the meaning of the title and use it correctly.

⚠warn	Indicates that the user may die or be seriously injured if not handled properly.
⚠Notice	Indicates content that may result in user injury, caution, and property damage if improperly handled.

● Symbol meaning

This mark indicates prohibited behavior	This mark indicates that you must follow the instructions

⚠warn	
	When using this product on the road, please comply with the laws and regulations of each local government and the road traffic regulations of each prefecture.。
	Do not operate while operating a motorcycle or bicycle. Be sure to park in a safe place and check the safety of your surroundings before continuing
	Do not install it where it will block your view or interfere with driving. Otherwise, it may cause an accident or injury.
	Do not disassemble or modify this product. Failure to do so may result in electric shock, fire, or burns。
	Do not put metal objects, water and other liquids, flammable substances, chemicals, etc. into this product. Failure to do so may cause a short circuit and cause a fire.
	If liquid leaking from the battery pack comes into contact with your eyes or skin, rinse with clean water. After rinsing, consult a doctor such as an ophthalmologist or dermatologist. In addition, leaked liquid may remain inside this product, so please contact the store where you purchased the product.

⚠Notice	
	If you notice any strange smell or noise from this product, please stop using it immediately. If you continue to use it as is, there is a risk of short circuit and fire.
	Avoid charging or placing the battery in hot and humid places. Otherwise, it may cause overheating, rupture, fire, electric shock, body deformation or malfunction。
	It can be used where it comes into contact with water, but care must be taken. Waterproof rating is IP66, but not completely waterproof
	When disposing of this product, please follow the regulations of each local government.

Correct use of lithium-ion batteries

1) Do not leave batteries near infants.

Please keep the equipment and batteries out of reach of children. Careless handling can be dangerous.

2) Do not leave batteries near pets.

Do not leave batteries near animals or pets. Chewing may damage the battery, causing it to overheat, explode, or catch fire.

3) If the battery leaks, keep it away from fire.

If the lithium-ion secondary battery leaks or emits a strange odor, immediately move it away from fire. Leaking electrolyte may ignite, causing an explosion or fire.

4) Do not short-circuit the battery.

Do not carry or store batteries together with metal items such as necklaces, pins, coins, keys, etc.Metals conduct electricity, so if a metal object such as a key comes into contact with the positive and negative terminals of a battery, a short circuit will occur, causing a large current to flow, causing heat generation, rupture, or fire, or causing these metals to generate heat.

5) Do not puncture the battery with nails or step on it.

Do not puncture the lithium-ion secondary battery with nails, hit it with a hammer, or step on it. Doing so may deform the lithium-ion secondary battery and damage its protective mechanism, causing overheating, rupture, or fire.

6) Do not throw batteries into fire.

If batteries are thrown into a fire, they may explode or catch fire, which is extremely dangerous. Also, heating batteries is dangerous as they may leak, explode, or catch fire.

7) Do not put batteries in microwave ovens etc.

Do not put batteries in the microwave or on top of an induction cooktop. It may heat up incorrectly, causing overheating, explosion, or fire.

8) Do not subject the battery or battery pack to strong impact.

Do not subject the battery to strong impact, such as dropping it from a height, or throwing it. This may deform the lithium-ion secondary battery or destroy the protection mechanism built into the lithium-ion secondary battery, causing heat generation, explosion, or fire.

9) Do not leave batteries in high temperature places.

Do not leave the product in high-temperature locations such as near a stop or inside a car under the scorching sun.

This may cause fluid leakage, heat generation, explosion, or fire.

10) If you notice any abnormality with the battery, stop using it.

If you notice a strange odor, heat generation, discoloration, deformation, or any other abnormality in the battery, please stop using it immediately.

The names of each part

■ body





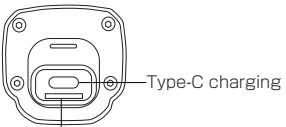

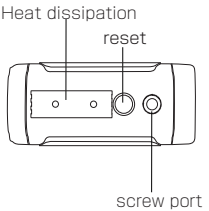

■ Motorcycle Accessories



Anti-theft adapter

Rubber sheet for anti-theft adapter x2



Screws and screwdriver for anti-theft adapter

Long screw for anti-theft adapter



Mounting buckle

Curved surface mount Double-sided tape



Handle Mount

screw

Reset pin



Waterproof Charging Cable

Screws for charging cable and screwdriver

Motorcycle Rearview Mirror Bracket

1/4 adapter



AEE Adapter

Bicycle version 710S Accessories

*If you buy a bike-specific model, the list of accessories is as follows (please note that the bike version 710S is not the same as the motorbike version 710S accessories, AKY-710S host is the same, if you have purchased the motorbike version of the customer, you need the bike version of the accessories, you can contact us to buy separately).

Screws and screwdrivers

screw

Suspension Adapter Sheet

Reset pin



Screws for charging cable and screwdriver



Waterproof Charging Cable



Adapter Plate and special screws

Mounting Base



Cyclocomputer mount

2mm rubber ring

6.5mm rubber ring

mount

base



2/3 mm hexagonal wrench

2mm hexagonal screw x 8

Non-slip sheet

*Please note that accessories may increase or decrease depending on the production lot.

Accessory installation for motorcycle version

Anti-theft bracket installation instructions:

1. Prepare all accessories such as anti-theft brackets, screws, screwdrivers, rubber sheets, etc.
2. Use a screwdriver to firmly screw the bracket and body together.
3. Use a small screwdriver to loosen the screws on one side of the bracket.
4. Once the bracket is in place and the bracket is in the correct position, use a screwdriver to tighten the screws on the bracket.
5. If the bracket shakes or is unstable after installation, you can use the included rubber sheet and put it inside the bracket to increase the stability of the bracket.
7. Please make sure all screws are locked and the anti-theft bracket is firmly installed and does not wobble while driving.

Handle bracket installation instructions:

Please prepare the F type bracket and the main body.

1.Attach the bracket to your bike and make sure the bracket is firmly fixed.
2. After fixing the bracket to the bike, align the screw hole on the bottom of the main unit with the screw on the bracket and tighten clockwise to ensure a stable installation.
3. Adjust the ball-shaped rotating head in the middle part of the bracket and loosen it counterclockwise. You can adjust the angle of the stand forward, backward, left and right as needed.
4. After adjusting to the best angle, tighten the ball swivel head clockwise to make sure the bracket is stable and the angle does not change.

note:

· Before installation, please make sure that the installation location does not affect driving safety or visibility.

- When adjusting the direction of the bracket, be careful not to collide with other parts.
- To prevent accidental loosening while riding, check the bracket and connection parts regularly to ensure that the connections are secu

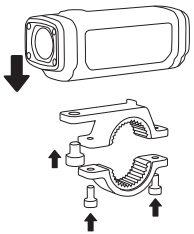

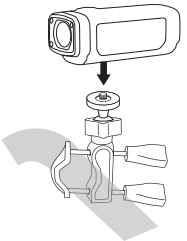

Accessory installation for motorcycle version

Adhesive helmet bracket installation instructions:

1. Please prepare accessories such as mounting buckle, curved mount, facing mount, double-sided tape, AEE adapter, 1/4 adapter, long screws, etc.
2. Select the appropriate mount (curved or facing mount) according to the curved or facing surface of the helmet.
3. Choose a suitable mounting location for the helmet and make sure the location is clean, dry, and free of oil and dust.
4. Peel off the protective film of the double-sided tape on the pedestal to expose the adhesive side.
5. Make sure the base is firmly attached to the helmet and install it, press lightly with your hand to make it stick completely.
6. Depending on the installation location, select AEE or 1/4 adapter to connect to the base.
7. Turn the long screw clockwise to secure the adapter and base.

Connect the device you want to install to the adapter and make sure the device is firmly attached. Adjust the stand position according to your personal needs to ensure the device is at the right angle and orientation.

please note:

Please make sure there are no scratches or damage on the surface of the helmet before installation to avoid affecting the adhesion of the base.

- After pasting the tape, it is recommended not to change its position frequently to maintain adhesive strength.

Helmet bracket installation

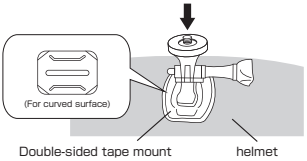

Rearview mirror bracket installation

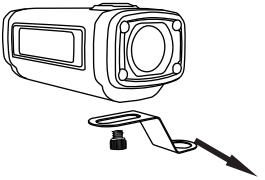

Installed in rearview mirror

Accessory installation for Bicycle version

1.Assemble the mounting base and adapter plate Secure the mounting base and adapter plate with small screws.

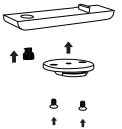

2.Mount the assembled quick release adapter plate to the AKY-710S using the large screws.

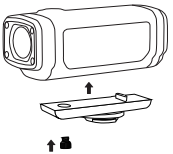

3.Attach the bike quick release bracket to the bike. After adjusting to the best angle, tighten the screws to fix it. Attach the AKY-701S to the bike quick release bracket.

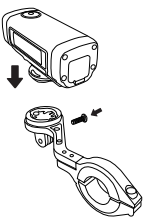

4. Inverted installation: First, install the base to the bottom of the bike quick release bracket. Then mount the AKY-710S to the base. Set [Camera Orientation] to [Flip Up and Down] in the application program. Otherwise, the recorded image will be upside down.

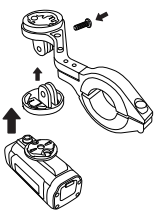

*please note that the bike version 710S is not the same as the motorbike version 710S accessories, AKY-710S host is the same, if you have purchased the motorbike version of the customer, you need the bike version of the accessories, you can contact us to buy separately.

About Memory cards

How to install Memory card:

The Memory card has already been inserted into the main unit.

1. Open the back cover and check if the Memory card is inserted correctly into the slot.

2.Gently press and hold until the Memory card is locked in the slot.

3. Close the rear cover and make sure it is locked tightly and cannot be opened accidentally while driving.

4. Turn on the power and check if the device can read the Memory card normally.

How to remove Memory card:

1. Turn off the power of the main unit.

2.Open the rear cover. Gently push the Memory card until it pops out of the slot. Be careful not to damage the Memory card or slot.

3. Carefully remove the Memory card and store it safely or return it to its original packaging.

please note:

Please keep the area around the Memory card slot clean to prevent dust and foreign objects from entering the slot to ensure normal use.

Connecting the waterproof charging cable and GPS charging cable (sold separately) Steps :

1.Prepare accessories such as AKY-710S, waterproof charging cable (supplied), GPS charging cable (sold separately), locking screws and screwdriver.

2.Open the rear cover of AKY-710S and align the screw holes with the charging port.

3. Insert the waterproof charging cable into the charging port of the device, making sure that the charging port and the charging cable socket are perfectly aligned.

4. Plug the other end of the charging cable into the mobile power supply, check that the connection is good, and then start charging.

5. Use the attached screws and screwdriver to securely tighten the waterproof charging cable and GPS cable to the AKY-710S.

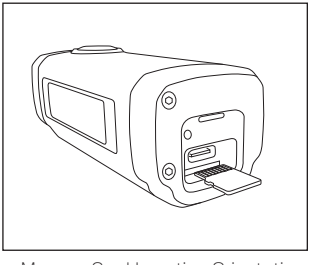

Memory Card Insertion Orientation

Insert the card firmly.

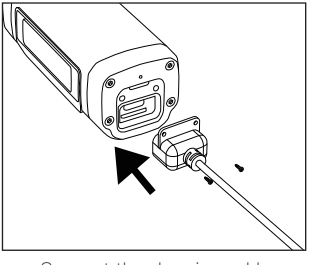

Connect the charging cable

Be sure to tighten the screws

Specifications

Model	AKY-710S
Product number	PRO BIKE CAMERA
Resolution	4K/2K/1080P
Frame rate	60FPS/55FPS/30FPS/28FPS
Lens	F1.6
Wide angle	142°
Waterproof and dustproof level	IP66
WIFI	2.4G
Memory Card	16GB～256GB ≥USHⅢ
Battery	1800mAh
charging port	USB Type-C
Frequency	50Hz/60Hz
Recording method	Loop/Gsensor/Parking monitor/Image
voice recording	support
release	AKEEYO APP playback on smartphone/ PC playback (Windows/iOS)
operating temperature	-10℃~60℃

Basic Operations

State	Response of machines and indicator lights
Power On/Off	Long Press 3s and vibrate 3 times
Start/stop recording	Short press 1s to start/stop recording
WiFi On/Off	Short press the power button 2 times to vibrate 2 times. Note: Wi-Fi is on by default at the factory.
Connected to power supply (power off state)	Auto Power On vibrates 3 times, then goes to recording. Unplug the power cord⇒Vibrate 3 times to turn off the power automatically.
Connected to power supply (power on state)	No change in the machine Unplug the power cord⇒Vibrate 3 times to turn off the power automatically.
Charging	When charging is finished, the green light disappears.
Loop Video	The indicator light blinks red and flashes slowly.
Emergency Video	The indicator light flashes red and rapidly after one long vibration.
Parking Video	Machine shutdown status: Crash, vibrate 3 times to turn on the machine and flash red light; after 30 seconds of recording to turn off the machine. Note: The parking monitor function is disabled by factory default. To use this function, you need to turn on the parking monitor function in the APP.
WIFI indicator colour	Turn on WiFi: The blue light is always on. Connected to WiFi: Blue light blinks slowly. Disconnected WiFi: The blue light is always on. Turn off WiFi: The blue light disappears.
Upgrade	The blue lights are flashing.
No Memory card inserted or Memory card not recognised	The blue lights are flashing.

The LED indicators may appear in a different mix of colours (e.g. purple) depending on the state of the machine itself, please be assured that this is normal.

Basic Operations

Red
Loop recording: slow red flashing
Stop recording: flashing red
Emergency recording: flashing red quickly

Blue
Not connected to WIFI-on-Smartphone: solid blue
Connected to WIFI on smartphone: slowly flashing blue
WIFI off: blue turns off

Green
Charging: green light always on
Charging complete: green light turns off

Mixed colour phenomenon:
When not charging.

WIFI on, connected to smartphone, recording in progress: red, blue flashing
WIFI on, not connected to phone, recording in progress: purple, blue flashing
WIFI on, connected to phone, recording stopped: red light
WIFI on, not connected to phone, recording stopped: purple light on

Charging:
WIFI on, connected to phone, recording in progress: yellow, flashing blue
WIFI on, connected to phone, recording stopped: yellow light on
WIFI on, no connection to phone, recording in progress: white, blue, flashing blue
WIFI on, no connection to phone, recording stopped: white, blue light

WIFI off, recording in progress: yellow, blue flashing
WIFI off, recording stopped: yellow lit

Video function

Loop Video

Press the power button for 3s to turn on and enter the loop recording mode after 3 vibrations. When the capacity of Memory card reaches the limit, the system will automatically overwrite the old files and continue recording.

Emergency Video

To use the emergency video function, you need to adjust the impact sensitivity to high/medium/low in the APP.

Notes:

When G-sensor sensitivity is set to "High", even minor impacts trigger emergency recording.
When G-sensor sensitivity is set to "Low", only strong impacts trigger emergency recording.
Emergency recording files are locked and won't be overwritten. Backup and delete them regularly as needed. (You can delete them via the mobile app, a card reader connected to a computer, or by connecting the included charging cable to a computer.)
Emergency recording files are stored in the Event folder on the Memory card.

Parking Monitoring Recording:

Activate parking monitoring in the app.
When the device detects an impact while off, it flashes a red light after vibrating three times, records for 30 seconds, then powers off after vibrating three times again.
Recorded files are locked and won't be overwritten. If too many files are locked, regularly back them up and delete as needed. (You can delete them via the app, a card reader connected toa computer, or by connecting the included charging cable to a computer.)
Parking monitoring records are stored in the "parking_monitoring" folder on the Memory card.
Note:
Ensure G-sensor sensitivity is set to high/medium/low in the app.

Take a picture

Note: The photo function can only be operated through the mobile phone APP.



Introduction to WiFi and APP

The "AKEEYO" app is a free application that allows you to control the AKY-710S, 2.4G wireless LAN-equipped dash camera, from your smartphone.

To install the app

① Read the QR code
Please install it.

②App Store or
Search from Google Play.

Google Play
で手に入れよう

App Store
からダウンロード

AKEEYO 検索

Post-installation procedures

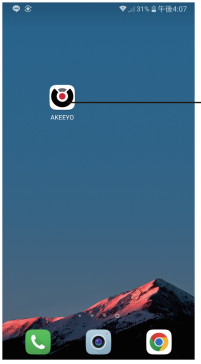

The app appears on the home screen
Make sure it is and click

Registration steps

1

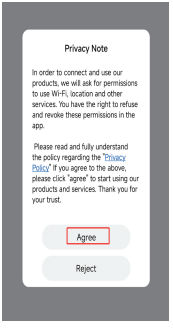

2

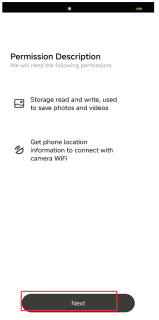

3

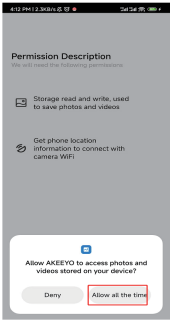

4

5

6

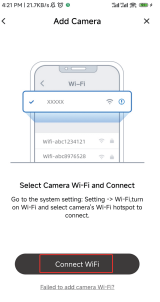

Introduction to WiFi and APP

①The WiFi of the machine is turned on by default after it is turned on. When it is turned off, short press 2 times to turn on the WiFi function.

②Open "AKEEYO" APP, click "Add Camera",Search the machine' s WiFi on your phone.

③After the machine's WiFi is displayed, click the WiFi name and enter the password to connect.The default Wi-Fi name is "AKY-710S-****" and the default password is "12345678".

*The WIFI name will not be displayed unless the main unit is turned on.

*The last 4 digits of the WiFi name are random. The WiFi name of each device is different.

*Camera Wi-Fi name and password can be changed.

7

8

④After WiFi connection, move to the main page

Introduction to WiFi and APP

9

10

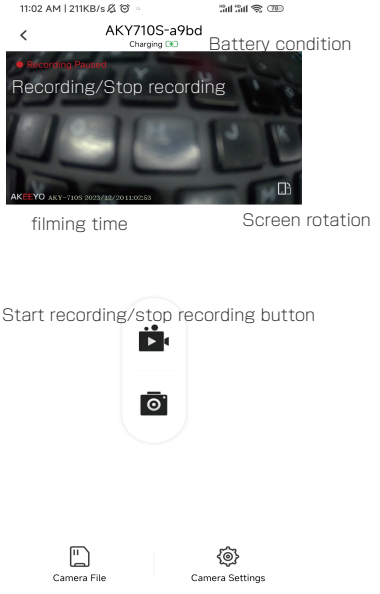

Introduction to WiFi and APP

After clicking carmera file, you can view the recorded videos and photos,
The following operation screens will be slightly different depending on the operating system of the mobile phone or mobile device used. Please understand in advance.

11

Click carmera file, the recorded file can be played back

Camera File

Camera Settings

12

Video files are classified according to categories and you can view the files as needed

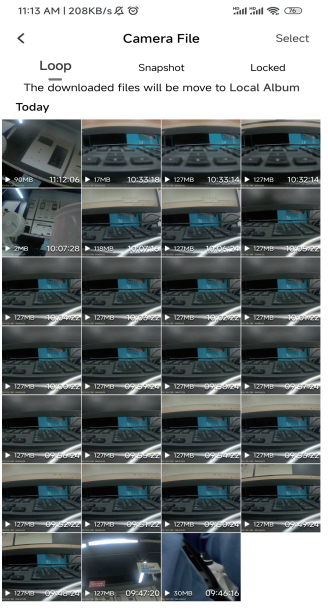

Play back and download videos

13

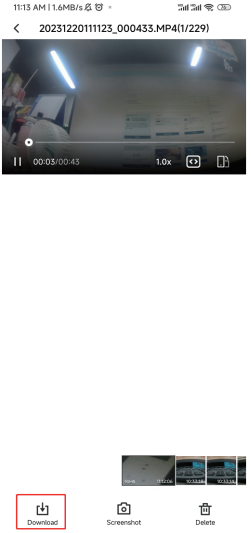

14

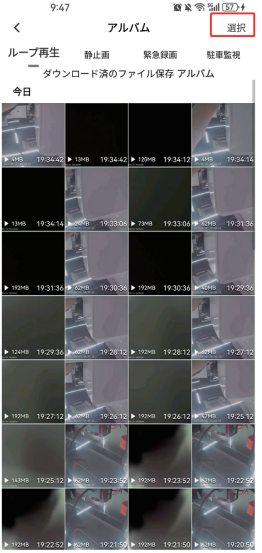

①Click on the video and confirm the video content on your phone

②Click the selection button in the upper right corner to select multiple videos and download multiple videos at the same time

③The downloaded video will be marked as downloaded

Edit the downloaded video on your mobile phone

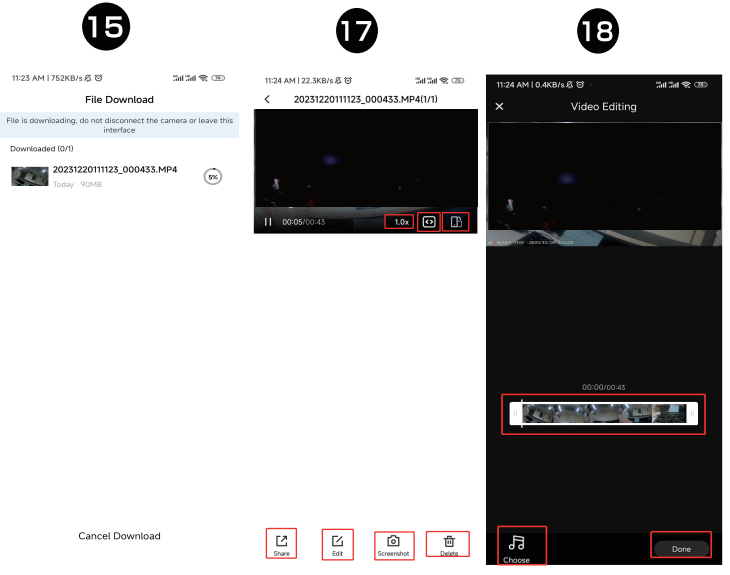

① You can adjust the playback speed of downloaded videos.

②Downloaded videos can be shared, edited, scripted, and deleted.

③After editing the video, tap Done and check it in My Album

where is my album?

19

Open AKEEYO APP

20

Click on album

21

Downloaded videos and edited videos will be stored here

Setting items in APP

Sound Recording	ON/OFF
Video Resolution	4K/2K/1080P
Loop Recording Duration	1/3/5Minute(s)
Frequency	50HZ/60HZ
Exposure Compensation	-2.0~+2.0
Time Stamp	ON/OFF
Mirroring	ON/OFF
Collision Sensing	off/Low/Medium/High
Parking Monitor	ON/OFF
WIFI Name	AKY-710S-****
WIFI Password	Initial password 12345678
Firmware Version	Current version number
Format Memory Card	Clear all Memory card memory
Raeset	Restore all settings to factory settings
Image Rotation	ON/OFF
Automatically Starts Up After Power-on	ON/OFF

New Functionality Added

1. Trigger parking monitoring: In addition to the original G-sensor trigger, add the function of time-lapse recording trigger, you can set 1sec/1frame; 2sec/1frame; 5sec/frame in APP, default off, the video file is saved in the parking monitoring folder.
2.New menu option of "delay power off" (5 minutes; half hour; 1 hour; off. Default off), set via APP.
3.New "Stop loop recording" menu option.
Trigger logic:
When this function is enabled, the recording will stop when the card is full, set via APP.

Reproduction of recorded images/photographs

Installing a dedicated player

① Turn off the power to the main unit and slowly remove the Memory card.
② Insert the Memory card into the card slot of your computer using a card reader (sold separately)
③ Click on the "gxplayer" folder on the Memory card and download the dedicated player.
④ Select the video file and play it on the video player on your computer.







Playback on Windows system

Compatible OS: Windows7, Windows8.1, Windows10
① Turn off the power to the main unit and slowly remove the Memory card.
② Insert the Memory card into the card slot of your computer using a card reader (sold separately)
③ There are four folders on the Memory card: "Event", "Normal", "parking_monitoring", and "Photo".
④ Select the video file and play it on the video player on your computer.。

Playback on Mac system

Compatible OS: Mac OSX10.3.6 or later
① Turn off the power to the main unit and slowly remove the Memory card.
② Insert the Memory card into the card slot of your computer using a card reader (sold separately)
③ There are four folders on the Memory card: "Event", "Normal", "parking_monitoring", and "Photo".
④ Select the video file and play it on the video player on your computer.。

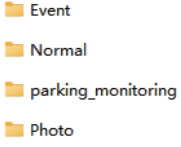

Reset

1.Press the reset button

If the unit becomes unstable or stops working, you can forcefully restart the unit by pressing the reset button on the bottom of the unit, but pressing this button will not restore the unit to its factory settings.

2.Reset with smartphone app

Clicking "Reset" in the settings section of the mobile app will return all settings of this device to the factory settings.

Reset on main unit



Reset with smartphone

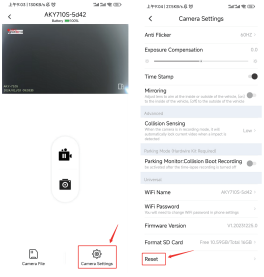

Version Update

1.Check for new version manually:

You can manually check if there is a new firmware version by clicking

More → About Us → Version Update in the app.

Note: Your phone needs to be connected to the internet during the process of detecting and downloading new versions.。





Version Update

2.Automatically upgrade via app (OTA)

When using the AKEEYO app for the first time, connect your smartphone to the device's Wi-Fi and obtain the product's firmware version.。

· Check for new version with internet connection:

If your smartphone is connected to the internet, open the app again. The app uses the already added firmware version to connect to the cloud and check for new firmware versions.

· Upgrade pop-up display: If there is a new firmware version, the app will display a pop-up window to notify you that there is a firmware update available。

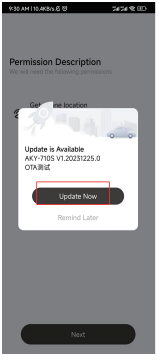

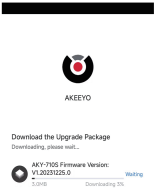

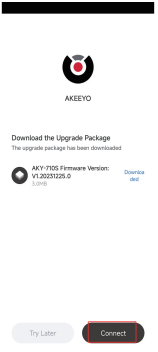

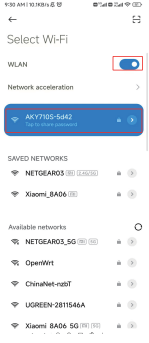

Troubleshooting

trouble	Troubleshooting steps
Unable to start normally	1.Make sure the power cord is connected correctly; 2. Check the battery power and try to charge it with a charger ;
Poor video quality	1. Check whether the camera lens is clean; 2. Confirm that the Memory card has enough free space; 3. Adjust video resolution and settings.。
Automatic shutdown or restart	1. Check whether the power connection is firm; 2. Confirm that the power cord is not faulty; 3. Try to update the firmware; 4. Contact after-sales service.
Unable to connect phone or Wi-Fi connection issues	1. Make sure the Wi-Fi password is correct; 2. Restart the driving recorder and mobile phone; 3. Update the app version; 4. Check whether the Wi-Fi of the driving recorder is turned on.
Memory card error	1. Check whether the Memory card is inserted correctly; 2. Make sure the Memory card is not damaged; 3. Try to use a computer to check and repair Memory card errors; 4. If there is no improvement, please replace the Memory card.
Parking monitoring function cannot be used	1. Make sure the parking monitoring function is enabled in settings; 2. Make sure the Memory card capacity is sufficient to support parking monitoring; 3. Check the settings of the parking monitoring mode, such as sensitivity and recording duration; 4. If the problem persists, please contact after-sales service.
The video is too dark or too bright	1. Adjust the camera exposure value; 2. Check and clean the camera lens; 3. Adjust the lighting conditions of the recording environment.
Video file lost	1. Check whether the Memory card is damaged; 2. Make sure the storage path of the video file is correct;

Disclaimer

Dear user, thank you for purchasing our motorcycle recorder product. To ensure you get the best experience when using the product, please
Read the following disclaimer carefully:

1. This product is for your personal use only, please make sure to use it within the scope permitted by law. Any use that is illegal or violates local regulations is prohibited.
2. When using this product, please comply with road traffic regulations and maintain good driving habits at all times. The presence of a recorder does not relieve you of your responsibility for driving safety.
3. This product may not be able to record correctly under special circumstances, such as extreme weather conditions or visual obstruction. Please exercise caution and rely on information about alternative transportation.
4. Please note that the performance of this product may be affected by various factors such as Memory card quality and recorder settings. Make sure to use a high-quality Memory card and check and adjust settings regularly.
5. When using this product, do not install it in a position that may affect driving safety, and avoid operating it while driving to avoid accidents.
6. Please perform correct installation and operation according to the instructions in the manual to ensure normal use of the product. We are not responsible for damage caused by improper use or operation.
7. If you encounter any faults or problems during use, please stop using it immediately and contact our after-sales service for assistance.
8. Thank you for your trust in our products. We look forward to your convenience and safety in use.

Return packing list

AKY-710S Return/Exchange/Refund Instructions

To process your return as quickly as possible, please return this book with the returned item.

1. Please select applicable services below (please indicate the services required)

Refund【 】 repair【 】 Exchange【 】

2.Please provide your order number

Order number：

3.Notification description

①Purchase date:

② Reason for return: (under what circumstances and what kind of failure occurred)

4.Emergency contact information

How do we contact you in the unlikely event that something needs to be checked during the repair/replacement process?

Please write down the following contact information

①telephone number: :

②Email address：

5. Return address (recipient + zip code + address + phone number)

6. Others

(if you have other questions or requests, please feel free to write).

If you need to return or repair, please fill in the above information and return it with the returned item.

AKEEYO

AKY-710S

取扱説明書

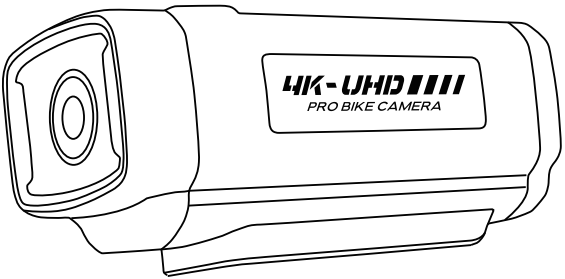

この度は、当社の商品をご購入いただき、誠にありがとうございます。
「取扱説明書」をよくお読みのうえ、正しくお使いください。

Line

お問い合わせ先：サポートセンター
Line ID：akeeyo
Email：help@akeeyo.co.jp
10:00~13:00　14:30~19:00
（土･日･祝祭日･年末年始除く）

目次

安全にお使い頂くた.....[J-3-4]
リチウムイオン二次電池の安全で正しい使い.....[J-5]
各部の名称.....[J-6]
自転車専用付属品.....[J-7]
バイクへの取り付け.....[J-8-9]
自転車への取り付け.....[J-10]
SDカードについて.....[J-11]
仕様書.....[J-12]
基本操作.....[J-13]
録画機能.....[J-14]
WIFIとアプリの簡単紹介.....[J-15-19]
APPで設定の項目.....[J-20]
録画した映像 / 撮影した写真の再生.....[J-21]
リセット.....[J-22]
バージョンアップグレード.....[J-23]
トラブルシューティング.....[J-24]
保証書.....[J-25]

安全にお使い頂くために

安全かつ効果的な取り扱いが行えるように、次の見出しを使用しています。
見出しの意味を十分にご理解の上、正しくお使いください。

⚠ 警告	取り扱いを誤った場合、使用者が死亡又は重傷を負う可能性が想定される内容。
⚠ 注意	取り扱いを誤った場合、使用者が傷害を負う可能性が想定される内容、および物的損害のみの発生が想定される内容。

●シンボルマークの意味

このマークは禁止の行為であることをあらわします。	このマークは指示を守ることをあらわします。

⚠ 警告

	本製品を道路上で使用する場合は、各地方自治体の条例、各都道府県の道路交通法に従ってください。
	バイクや自転車などの運転中に操作しないでください。 必ず安全な場所に停車させ、周囲の安全を確認してから行ってください。
	視界を遮ったり、運転の妨げになったりするような場所には取り付けないでください。 事故やケガの原因になります。
	本製品を分解・改造しないでください。 感電や火災、やけどの原因になります。
	本製品の内部に金属物、水などの液体、燃えやすい物質、薬品などを入れないでください。 回路がショートして火災の原因になります。
	バッテリーパックから漏れた液体が目や肌に付着した場合は、清潔な水で洗い流してください。 洗い流したあとは眼科や皮膚科など医師の診断を受けてください。 また本製品内に漏れた液体が残っていることがあるので、お買い上げの販売店にご相談ください。

⚠ 注意

	本製品から異臭や音がしたら、ただちに使用を中止してください。 そのまま使用し続けると、ショートして火災の原因になるおそれがあります。
	高温多湿になる場所での充電、放置は避けてください。 発熱、破裂、発火、感電、本体の変形、故障の原因となるおそれがあります。
	水がかかる場所でも使用できますが、注意が必要です。 防水等級はIP66準拠ですが、完全防水ではありません。
	本製品を廃棄する場合は、各自治体の条例に従ってください。 内容については各自治体にお問い合わせください。

安全にお使い頂くために

⚠ 警告

本体は IP66 防水レベルですが、高圧洗浄機等でドライブレコーダーの本体を洗わないでください。高圧洗浄機等を使ってバイクを洗浄した際に、ドライブレコーダーの内部に水が侵入すると、故障の原因になり保証対象外となります。

リチウムイオン二次電池の安全で正しい使い方

1) 電池を乳幼児のそばに放置しない
使用機器及び電池は乳幼児の手の届かないとこるに置いてください。
不用意な取り扱いは危険を伴います。

2) 電池をペットのそばに放置しない
動物・ペットのそばには、電池を放置しないでください。
噛む等によって電池が破損し、発熱、破裂、発火の原因になります。

3) 電池が液もれしたら火気から遠さける
リチウムイオン二次電池が液もれしたり、異臭がする時には、直ちに火気より遠さけてください。もれた電解液に引火し、破裂、発火する原因になります。

4) 電池はショート +(短絡) させない
電池をネックレスやハアピン、コイン、鍵などの金属製品と一緒に持ち運んだり保管しないでください。金属は電気を流すため、電池のプラス椒とマイナス極に鍵などの金属がぶれるとショートして大きな電流が流れ、発熱、破裂、発火、あるいはこれらの金属などが発熱するなどして危険です。

5) 電池に釘を刺したり、踏みつけたりしない
リチウムイオン二次電池に釘を刺したり、ハンマーで叩いたり、踏みつけたりしないでください。リチウムイオン二次電池が変形、保護機構が破損する可能性があり、発熱、破裂、発火の原因になります。

6) 電池は火中に投入しない
電池を火中に投入すると、破裂や発火し非常に危険です。また、電池を加熱すると、液もれ、破裂、発火などが起こる場合があり危険です。

7) 電池を電子レンジなどに入れない
電池を電子レンジに入れたり、電磁調理器の上に置かないでください。誤って加熱され、発熱、破裂、発火の原因になります。

8) 電池や電池パックに強い衝撃を加えない
電池に高所からの落下など強い衝撃を与えたり、投げつけたりしないでください。
リチウムイオン二次電池が変形したり、リチウムイオン二次電池に組み込まれている保護機構が壊れ、発熱、破裂、発火の原因になります。

9) 電池を高温になる場所に放置しない
ストーブのそば、炎天下の自動車の車内など高温になる場所に放置しないでください。
液もれ、発熱、破裂、発火の原因になります。

10) 電池の異常に気ついたら使用を中止する
電池の異臭、発熱、変色、変形、その他今までと異なることに気ついた時は、ただちに使用を中止してください。

各部の名称

■ 本体

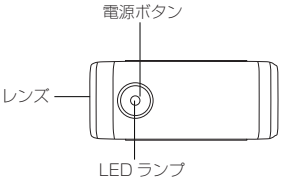

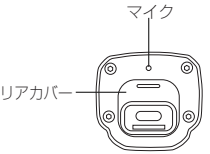

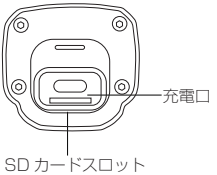

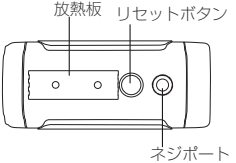

バイク専用付属品



盗難防止アダプター

盗難防止アダプター用
ゴムシート x2



盗難防止アダプター用
ネジとドライバー

盗難防止アダプター用
長いネジ



マウント用バックル



曲面マウント
両面テープ



ハンドル取付マウント

スクリュー

リセット用ピン



防水充電ケーブル

充電ケーブル用ネジ
とドライバー

バイクバックミラー
ブラケット

1/4 アダプター



AEE アダプター

自転車専用付属品

自転車専用モデルをご購入の場合、付属品の一覧は次の通りです。



ネジとドライバー

スクリュー

下吊りアダプターシート

リセット用ピン

充電ケーブル用ネジとドライバー



防水充電ケーブル



アダプタープレートと専用ネジ

取付けベース



サイコンマウント

2mmゴムリング

6.5mmゴムリング

マウント

ベース

2/3mm六角レンチ

2mm六角ネジx8

滑り止めシート

*生産ロットによって、付属品が増減する場合がありますので、ご了承ください。

バイクへの取り付け

盗難防止ブラケットの取り付け手順

1. 盗難防止用ブラケット、ネジ、ドライバー、ゴムシートなどの付属品をすべて準備してください。
2. ドライバーを使用して、ブラケットと本体をしっかりとネジで固定します。
3. 小さなドライバーを使用してブラケットの片側のネジを緩めます。
4. ブラケットを適切な位置に取り付け、ブラケットの位置が正しいことを確認したら、ドライバーでブラケットのネジを締めます。
5. 取り付け後にブラケットが揺れたり不安定な場合は、付属のゴムシートを使用してブラケットの内側に入れ、ブラケットの安定性を高めることができます。
7. すべてのネジがロックされていること、盗難防止ブラケットがしっかりと取り付けられていて、運転中にぐらつかないことを確認してください。

ハンドル取付マウントの取り付け手順

ハンドル取付マウントと本体をご用意ください。

1. ブラケットをバイクに取り付け、ブラケットがしっかりと固定されていることを確認してください。
2. ブラケットをバイクに固定したら、本体底面のネジ穴とブラケットのネジを合わせ、時計回りに締めると安定して取り付けられます。
3. ブラケットの中央部分にあるボール状の回転ヘッドを調整し、反時計回りに緩めます。必要に応じてスタンドの角度を前後左右に調整できます。
4. 最適な角度に調整した後、ボールスイベルヘッドを時計回りに締めて、ブラケットが安定し、角度が変わらないことを確認します。

ご注意：

・取り付ける前に、取り付け場所が運転の安全性や視界に影響を与えないことを確認してください。
・ブラケットの方向を調整する際は、他の部品との衝突にご注意ください。
・走行中の不用意な緩みを防ぐために、ブラケットと接続部分を定期的にチェックし、接続がしっかりしていることを確認してください。

盗難防止ブラケットの取付

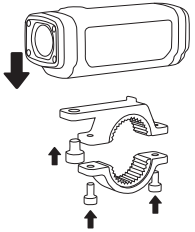

ハンドル取付マウントの取付

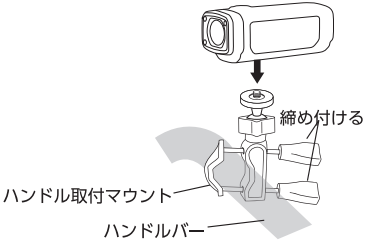

バイクへの取り付け (つづき)

粘着ヘルメットブラケットの取り付け手順：

1. マウント用バックル、曲面マウント、両面テープ、AEE アダプター、1/4 アダプター、長いネジなどの付属品をご用意ください。
2.
3. ヘルメットの適切な取り付け位置を選択し、その場所が清潔で乾燥しており、油分や埃がないことを確認してください。
4. 台座の両面テープの保護フィルムを剥がすと粘着面が露出します。
5. ベースをヘルメットにしっかりと貼付けていることを確認して取り付け、手で軽く押して完全に貼付けさせます。
6. 取り付け場所によって、ベースへの接続に AEE または 1/4 アダプターを選択します。
7. 長いネジを時計回りに回して、アダプターとベースを固定します。

取り付けるデバイスをアダプターに接続し、デバイスがしっかりと取り付けられていることを確認します。
個人のニーズに応じてスタンドの位置を調整し、デバイスが適切な角度と方向になるようにします。
ご注意：
· ベースの接着に影響を与えないように、取り付ける前にヘルメットの表面に傷や損傷がないことを確認してください。
· テープを貼付けした後は、接着力を維持するために頻繁に位置を変更しないことをお勧めします。

オートバイのバックミラーブラケットの取り付け手順：

1. 元のバックミラーを慎重に分解し、バックミラーブラケットの位置がきれいで整頓されていることを確認します。
2. バックミラーを取り外した位置にバックミラーブラケットを置き、ブラケットがしっかりと取り付けられていることを確認してから、バックミラーを再度ロックします。
3. ネジを使用して機械をバックミラーブラケットに固定し、走行中に機械が揺れたり脱落したりしないように適切にロックします。

ご注意：
ネジを取り付ける際は、走行中のぐらつきや脱落を防ぐため、適度な力でしっかりと固定してください。
機械の設置位置と角度を調整して、鮮明な視界を確保できます。

ヘルメットブラケットの取付

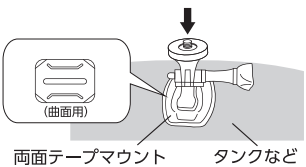

バックミラーブラケットの取付

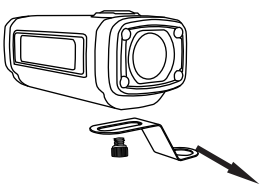

バックミラーに設置

自転車への取り付け

1.取付けベースとアダプタープレートの組み立て
·小さなネジを使って、取付けベースとアダプタープレートをしっかりと固定します。

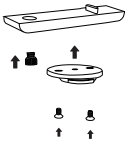

2.組み立てたクイックリリースアダプタープレートを大きなネジを使って本体に取り付けます。

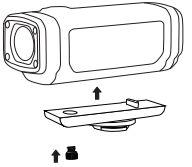

3.サイクルコンピューターマウントを自転車に取り付けます。最適な角度に調整した後、ネジを締めて固定します。本体をサイクルコンピューターマウントに取り付けます。

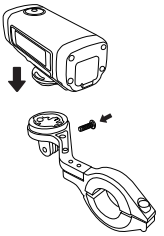

4.逆さ取り付け:まず、サイクルコンピューターマウントの下側にアンダーマウントを取り付けます。
·次に、本体をアンダーマウントに取り付けます。
·アプリで【カメラ方向】を【上下反転】に設定します。そうしないと、撮影画像が上下逆さまになります。

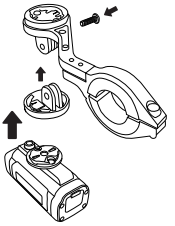

SD カードについて

SD カードの取り付け方法：

1. リアカバーを開け、SD カードが正しくスロットに挿入されているか確認します。
2. 軽く押し込みながら SD カードがスロットにロックされるまで押し続けます。
3. リアカバーを閉じ、しっかりとロックされ、走行中に誤って開かれないようにします。
4. 電源をオンにし、本体が SD カードを正常に読み取れるか確認します。

SD カードの取り外し方法：

1. 本体の電源をオフにします。
2. リアカバーを開けます。SD カードを軽く押し、スロットから飛び出るまで押し出します。
SD カードやスロットを損傷させないよう、注意してください。
3.SD カードを慎重に取り出し、安全に保管するか、元の包装に戻します。

ご注意：

SD カードスロット周辺を清潔に保ち、塵や異物がスロットに入り込まないようにし、正常な使用を確保してください。

防水充電ケーブルと GPS ケーブルの接続手順：

1. 本体、防水充電ケーブル (付属)、GPS 充電ケーブル (別売り)、ロック用のネジ、ドライバーなど、付属品をご用意ください。
2. 本体後部のリアカバーを開け、ネジ口と充電口の向きを合わせます。
3. 防水充電ケーブルを本機の充電ポートに差し込み、充電ポートとケーブルソケットが完全に一致するように確実に奥まで差し込みます。
4. 充電ケーブルのもう一方の端をモバイル電源に差し込み、接続が正常であることを確認してから充電を開始します。
5. 付属のネジとドライバーを使用して、防水充電ケーブルと GPS ケーブルを本体にしっかり締めます。

SD カード挿入向き
しっかり奥まで挿入



充電ケーブルの接続
必ずネジを締めてください

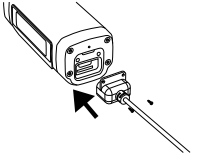

仕様書

型番	AKY-710S
商品名	ドライブレコーダー
記録画素数	4K/2K/1080P
電源	5V　2A
レンズ	F1.6
広角	142 度
防水防塵レベル	IP66 相当
WIFI	2.4G
SD カード	16GB～256GB ≥UHSⅢ
バッテリー	1800mAh
充電	USB Type-C
周波数	50Hz/60Hz
録画方法	常時録画 /G センサー録画 / 駐車監視録画 / 静止画
音声録音	対応
再生	スマホで AKEEYO APP 再生 /PC 再生 (Windows/iOS)
動作温度範囲	-10℃~60℃

基本操作

本体状態	本体とインジケーターライトの反応
電源のオン / オフ	・電源オン状態で 長押しで 3 回振動して電源オフ ・電源オフ状態で 長押しで 3 回振動して電源オン
録画の開始 / 中止	・録画中に電源ボタンを 1 回押すと、1 回振動して録画が停止します。 ・録画停止時に電源ボタンを 1 回短く押すと録画を続きます。
WIFI のオン / オフ	・電源ボタンを 2 回短く押し、2 回振動して WiFi を オン / オフにします。 ご注意：デフォルトで WiFi がオンになっています。
電源オフ時に外部 電源を接続する場合	・自動的に電源が入り、3 回振動し、ループ録画に入ります。 ・電源コードを抜いて、3 回振動し、自動的に電源が切れます。
電源オン時に外部 電源を接続する場合	・本体の状態に変更ありません。 ・電源コードを抜いて、3 回振動し、自動的に電源が切れます。
充電中	・緑色のライトが点灯し、充電が完了しました。緑色の光が消えます。
ループ録画	・赤いライトがゆっくり点滅します。
衝撃録画	・長い振動があり、赤いライトが速く点滅します。
駐車監視録画	・衝撃を検知すると本体が自動的に起動して 3 回振動し、赤いライトが点滅し、30 秒間録画した後、3 回振動して電源オフになります。 ご注意：駐車監視機能をオンにする必要がありますが、 デフォルトではオフになっています。
WIFI 接続	WiFi オン：青いランプが点灯します。 WiFi 接続完了：青いランプがゆっくりと点滅します。 WiFi 切断：青いランプが長時間点灯しています。 WiFi オフ：青いランプが消灯しています。
本体アップグレード中	青いライトが速く点滅します。
カードが挿入されていないか、検出されません	青いライトが速く点滅します。

*多機能が同時に動作すると混色の場合があります。

録画機能

ループ録画

電源ボタンを 長押しして電源を入れ、3 回振動した後、ループ録画に入ります。
SD カードの容量が上限に達すると、自動的に古いファイルから上書きして録画を続けます。

緊急録画

緊急録画機能を使用するには、モバイル APP で衝撃感度を / 低 / 中 / 高に設定する必要があります
本機の電源が入っているとき、本機に搭載されている G センサーが衝撃を検知すると、本機が 1 回振動し、緊急録画を開始します。緊急録画ファイルはロックされ、上書きされません。

ご注意：

1. 緊急録画が終了すると、自動的にループ録画に入ります。
2. G センサーの感度を [高] に設定すると、わずかな衝撃も検知可能です。
G センサーの感度を [低] に設定すると、非常に強い衝撃のみを検出可能です 。
3. 緊急録画で保存されたファイルはロックされ、自動的に上書きされませんので、ロックされたファイルが増加した場合は、必要に応じて定期的にファイルをバックアップし、削除してください。
ファイルは携帯電話やパソコンから削除できます。

駐車監視機能

1.APP で駐車監視機能をオンにします。
2. 電源オフの場合、衝撃を検知すると本体が自動的に起動して 3 回振動し、赤いライトが点滅し、30 秒間録画した後、3 回振動して電源オフになります。ビデオはロックされて SD カードに保存され、新しいファイルによって上書きされません。

ご注意：

駐車監視機能を使用するには、衝撃感度を高 / 中 / 低に設定し、駐車監視機能をオンに設定必要です。

静止画

WiFi で APP に接続し、リアルタイム表示ページに入り、写真アイコンをクリックして写真を撮ります。
ご注意 : 静止画機能は APP 操作を通じてのみ実現できます。



WIFI とアプリの簡単紹介

アプリ「AKEEYO」は、AKY-710Sの無線LAN内蔵ドライブレコーダーを、スマートフォンから操作できる無料アプリです。
初期パスワードは12345678です。スマートフォンに接続することで、リアルタイムで走行状況を表示できます。

アプリのインストール

①QRコードを読み取ってインストールしてください。

②App Store又はGoogle Playより検索。

Google Play
で手に入れよう

App Store
からダウンロード

AKEEYO 検索

インストール後の手続き

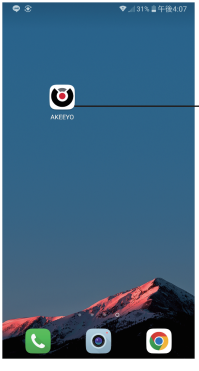

ホーム画面に、アプリが表示されていることを確認しクリック

WIFI とアプリの簡単紹介 (つづき)

登録方法

1

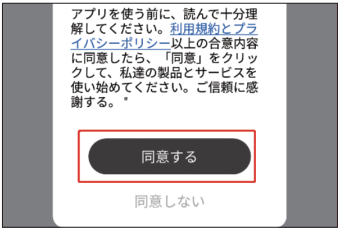

2

3

4

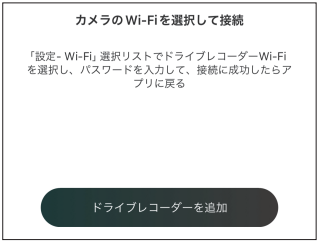

WIFI とアプリの簡単紹介（つづき）

❺

❻

❼

❽

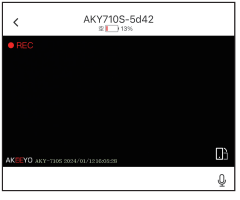

❾

WIFI とアプリの簡単紹介 (つづき)

ダウンロードした動画をスマホで編集する

10

11

12

①ダウンロードした動画は再生スピードを調整できます。
（1秒1フレーム / 0.2x / 0.5x / 1.0x / 3.0x / 10.0x）
②ダウンロードした動画は共有･編集･スクリショート･削除できます。
③動画を編集した後、「完成」をタップし、マイアルバムで確認できます。

WIFI とアプリの簡単紹介 (つづき)

マイアルバムはどこですか?

13

AKEEYOアプリをタップ

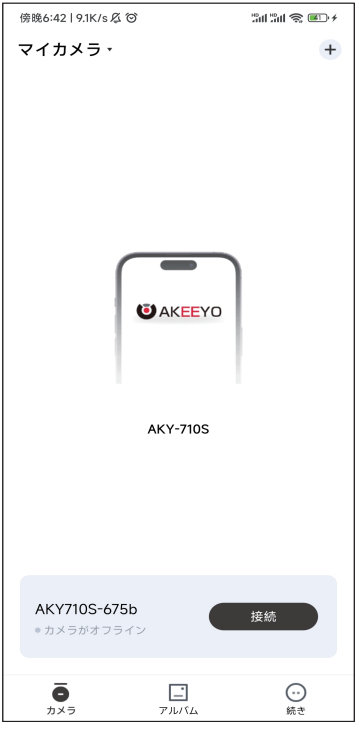

14

アルバムをタップ

APP で設定の項目

項目	設定
音声録音	オン/オフ
録画解像度	4K/2K/1080P
ループ録画時間	1分/3分/5分
周波数	50Hz/60Hz
露出補正	-2.0~+2.0
タイム透かし	オン/オフ
レンズの向き	上下反転オン/オフ
鏡像	オン/オフ
遅延シャットダウン	オフ/30分/1時間/オフ
電源オンで自動起動	オン/オフ
衝撃検知	オフ/低/中/高
駐車監視	オン/オフ
タイムプラス動画	オフ/1秒1fps//2秒1fps//1秒5fps
無線LAN名	AKY-710S-****
WIFIパスワード	初期パスワードは12345678です
ファームウェアバージョン	現時点のファームウェアバージョン
SDカードを初期化	カード上のデータを消去して初期状態に戻す操作です。
リセット	機器やデバイスを初期状態に戻します

*電源オンで自動起動(スイッチ、デフォルトはオフ)スイッチがオンの場合、通電すると自動的に起動して録画を開始します。スイッチがオフの場合、通電すると充電のみ行い、手動で電源ボタンを押して起動する必要があります。
*ソフトウェアのバージョンアップによって、機能が増えたり減ったりすることがあります。

録画した映像 / 撮影した写真の再生

専用プレヤーのインストール

①本体の電源をオフして、SD カードをゆっくり取り出します。
②カードリーダー (別売り) を使用して SD カードをパソコンのカードスロットに挿入します。
③SD カードに「gxplayer」のフォルダをクリックして、専用のプレヤーをダウンロードします。
④ビデオ ファイルを選択し、コンピュータ上のビデオプレーヤーで再生します。



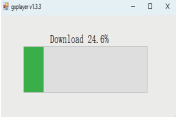

Windows で再生する場合

対応 OS :Windows7、Windows8.1、Windows10
①本体の電源をオフして、SD カードをゆっくり取り出します。
②カードリーダー (別売り) を使用して SD カードをパソコンのカードスロットに挿入します。
③SD カードに「Event」「Normal」「parking_monitoring」「Photo」4 つのフォルダがあります。
④ビデオ ファイルを選択し、コンピュータ上のビデオプレーヤーで再生します。

Mac で再生する場合

対応 OS : Mac OSX10.3.6 以降
①本体の電源をオフして、SD カードをゆっくり取り出します。
②カードリーダー (別売り) を使用して SD カードをパソコンのカードスロットに挿入します。
③SD カードに「Event」「Normal」「parking_monitoring」「Photo」4 つのフォルダがあります。
④ビデオ ファイルを選択し、コンピュータ上のビデオプレーヤーで再生します。

プレーヤーインターフェース

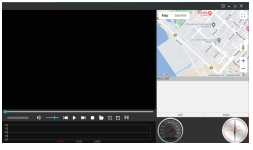

リセット

1. 本体でリセットボタンを押してリセット

本体の動作が不安定や動作しなくなった場合、本機底面のリセットボタンを押すと強制的に再起動できますが、このボタンを押しても工場出荷時の状態には戻りません。

2.録画を一時停止した状態で、電源ボタンを5回連続で押すと、デバイスがシャットダウンして再起動し、工場出荷時設定にリセットされます。

3. スマホアプリでリセット

モバイルアプリの設定項目で「リセット」をクリックすると、本機のすべての設定項目が工場出荷時の設定に戻ります。

本体でリセット



スマホでリセット

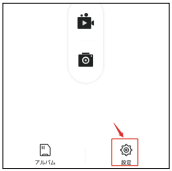

バージョンアップグレード

1. 手動で新しいバージョンを確認：

アプリで [その他]→[私達について]→[バージョンアップグレード] の順にクリックして、新しいファームウェアバージョンがあるかどうかを手動で確認できます。

ご注意：新しいバージョンの検出とダウンロードする過程で、スマホはインターネットに接続が必要です。

バージョンアップグレード（つづき）

2. アプリで自動的にアップグレード（OTA）

初めて AKEEYO アプリを使用する際、スマホを本体のWIFI に接続し、製品のファームウェアバージョンを取得します。

・インターネット接続で新しいバージョンを確認：

スマホがインターネットに接続されている場合、再びアプリを開きます。アプリは既に追加された

ファームウェアバージョンを使用してクラウドに接続し、新しいファームウェアバージョンを確認します。

・アップグレードのポップアップ表示：新しいファームウェアバージョンがある場合、アプリはポップアップウィンドウを表示し、利用可能なファームウェアの更新があることを通知します。

ドラブルシューティング

こんな時は？	ここを確かめてください
電源が入らない、または正常に起動できない	1. 電源コードが正しく接続されていることを確認します； 2. バッテリー残量を確認し、充電器で充電してみてください； 3. アフターサービスにお問い合わせください。
ビデオ品質が低い	1. カメラのレンズが汚れていないか確認します； 2. SD カードに十分な空き容量があることを確認します； 3. ビデオの解像度と設定を調整します。
MicroSDカードが読めない	SDカードが正しくセットされていることを確認してください。 SDカードがフォーマットされていない可能性があります。 フォーマットしてください。
ビデオファイルの再生が遅いまたは、なめらかに再生できない	ビデオ再生ソフトによっては再生ができない場合があります。
	本体とパソコンがUSBケーブルで正しく接続されていることを確認してください。
	ビデオファイルを再生する前にパソコンにビデオファイルを転送してください。
	ビデオ再生ソフトを最新版にしてください。
自動シャットダウンまたは再起動	1. 電源がしっかり接続されているかどうかを確認します； 2. 電源コードに欠陥がないことを確認します；3. ファームウェアを更新してみてください；4. アフターサービスにお問い合わせください。
パソコンが本体を認識しない	本体の電源が入っていることを確認してください。
	SDカードが正しくセットされていることを確認してください。
	SDカード内のビデオファイルが破損している可能性があります。 再フォーマットを試してください。
過度の風切音	集音マイクを進行方向に向けないよう、取付位置を変換してください。
本体の動作が不安定又は、動作しない	本体をリセットしてください。
	本体を再起動、また録画用カードを交換してください。
携帯電話に接続できない、または Wi-Fi 接続の問題	1. Wi-Fi パスワードが正しいことを確認します；2. レコーダーと携帯電話を再起動します；3. アプリのバージョンを更新します； 4. レコーダーの WiFi がオンになっているかどうかを確認します。

もし他の問題があれば，QR コードをスキャンして、ご確認ください。

保証書

保証期間内に取扱説明書に従い正しいご使用で故障した場合の保証を致します。お買い上げの販売店へ本書をご記入の上ご相談ください。

品番		
ご購入日	年　　月　　日	保証期間：ご購入日より1年
ご注文番号		
お客様	お名前	
	ご住所（　　） 電話番号（　　）	
販売店		

上記欄に記入のない場合は、無効となりますので必ずご確認ください

故障内容記入欄

AKEEYO

行車記錄器使用說明書

AKY-710S　Ver1.03

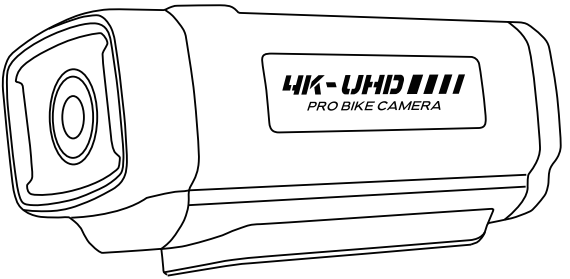

PRO BIKE CAMERA

目錄

安全使用注意事項.....C-03-04
鋰離子二次電池的安全與正確使用方式.....C-05
包裝內各部件名稱.....C-06-07
安裝主機.....C-08-09
S D 卡相關事項.....C-10
規格書.....C-11
基本操作.....C-12
電池續航時間對照表.....C-13
錄影功能.....C-14
WiFi 和 APP 的簡單介紹.....C-15-19
APP 內可設置的項目.....C-20
回放錄影的文件或者照片.....C-21
恢復出廠設置.....C-22
軟體版本升級.....C-23
故障排查.....C-24
免責聲明.....C-25

安全使用注意事項

以下標題用於確保安全有效的處理。請充分理解標題含義並正確使用。

⚠ 警告	表示如果處理不當，使用者可能會死亡或嚴重受傷。
⚠ 注意	表示如果處理不當可能導致使用者受傷、小心和財產損失的內容。

● 符號標記的意思

🛇	此標記表示禁止的行為	❗	此標記表明您必須遵循說明

⚠ 警告

❗	在道路上使用本產品時，請遵守各地方政府的法令以及各縣市區域的道路交通法規。
🛇	請勿在駕駛摩托車或自行車時進行操作。請務必將車停在安全的地方，並在繼續前檢查周圍環境的安全性。
🛇	請勿將其安裝在會遮擋視線或甘擾駕駛的地方，否則可能會導致事故或受傷。
🛇	請勿拆卸或改裝本產品。 否則可能會導致觸電、火災或燒傷。
🛇	請勿將金屬物、水等液體、易燃物質、化學品等放入本產品內。 否則可能會導致電路短路並引起火災。
❗	如果電池組漏出的液體接觸到眼睛或皮膚，請用清水清洗。 沖洗後，請諮詢眼科醫生或皮膚科醫生等醫生。 另外，本產品內部可能殘留洩漏的液體，因此請聯絡購買該產品的商店。

⚠ 注意

❗	如果您發現本產品有任何奇怪的氣味或噪音，請立即停止使用。如果繼續按原樣使用，則有發生短路和火災的危險。
🛇	避免在炎熱和潮濕的地方充電或放置電池。否則可能會導致過熱、破裂、火災、觸電、本體變形或故障。
❗	它可以在接觸到水的地方使用，但必須小心。防水等級符合 IP66，但並非完全防水。
❗	廢棄本產品時，請遵守各地方政府的規定。

安全使用注意事項

⚠ 警告

雖然機器具有IP66 防水等級，
但請勿使用高壓清洗機清洗行車記錄器。
使用高壓清洗機清洗車輛時，如果行
車記錄器或攝影機進水，可能會導致故
障，且不屬於保修範圍。

鋰離子二次電池的安全與正確使用方式

1 請勿將電池放在嬰幼兒附近

請勿將使用的裝置和電池放在嬰幼兒無法觸及的地方，避免不慎造成危險。

2. 請勿將電池放在寵物附近

勿將電池放在動物或寵物附近。電池可能因咬損而損壞，導致過熱、爆裂、引發火災。

3. 漏液時需遠離火源

鋰離子二次電池漏液或發出異味，應立即遠離火源。漏液的電解液可能引發火災、爆裂、發火。

4. 短路電池

請勿將電池與項鍊、髮夾、硬幣、鑰匙等金屬製品一同攜帶或儲存。金屬可以導電，如果金屬接觸電池的正負極，能導致短路，產生大電流，引起過熱、爆裂、發火，或者金屬本身受熱危險。

5. 戳穿或踩踏電池

勿使用釘子刺穿或用錘子敲擊、踩踏鋰離子二次電池。這樣可能導致電池變形，保護機構損壞，引發過熱、爆裂、發火。

6. 請勿將電池投入火中投入火中可能導致電池破裂或發生火災，極度危險。同時，加熱電池也可能導致漏液、破裂、發火等危險情況。

7. 請勿將電池放入微波爐等器具中請勿將電池放入微波爐中，也不要將其放在電磁爐上。這樣可能誤將電池加熱，引起發熱、破裂、發火等危險。

8. 請勿對電池或電池包施加強烈衝擊，請勿將電池從高處摔落或撞擊。這樣可能使鋰離子二次電池變形，或損壞內部的保護機制，引發發熱、破裂、發火等危險。

9. 請勿將電池放置於高溫環境，請勿將電池放在爐灶附近或停車時高溫的車內。這樣可能導致漏液、發熱、破裂、發火等危險情況。

10. 注意異常狀況，立即停止使用電池，如果發現電池有異味、發熱、變色、變形，或者發現其他與平常不同的情況，請立即停止使用。

包裝內各部件的名稱

主機

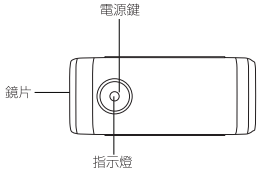

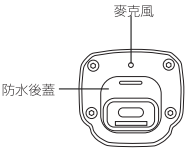

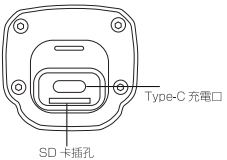

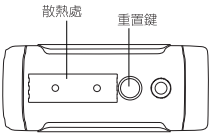

自行車配件



後視鏡支架螺絲和扳手



防水充電線



充電線用螺絲
和螺絲起子

2mm六角螺絲



轉接片
轉接片專用螺絲

快拆片

下挂轉接座



自行車碼錶支架

2mm防滑墊片

6.5mm防滑墊片

轉接座

碼表底座

2mm六角螺絲

2/3mm六角扳手

轉接架墊片

選配配件（需要另外購買）

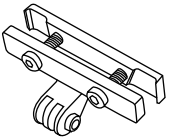

底座倒裝支架

綁帶式頭盔支架



GPS 防水充電線

安裝主機

快拆轉接片支架安裝步驟:
1.將自行車碼錶支架安裝在自行車上,調整好最佳角度後擰緊螺絲。
2.將快拆片和轉接片用對應的小螺絲鎖緊。
3.將組裝好的快拆轉接片用大螺絲安裝在主機上。
4.將主機安裝在碼錶支架上。
正裝:直接安裝並扭緊
倒裝:需先將下掛轉接座安裝在自行車碼錶支架下方,再將機器扣在下掛轉接座上。
*倒裝安裝需在APP端設置【鏡頭方向】-【上下翻轉】,否則拍攝畫面會上下顛倒。

注意事項:
1.安裝前確保安裝位置不會影響駕駛安全和視線。
2.調整支架方向時,謹慎操作以避免碰到別的零部件。
3.定期檢查支架和連接部位,確保連接處牢固,防止在行駛中發生意外鬆動。
4.在拆卸貨調整時,按照逆操作進行,確保所有部件正常使用。

快拆轉接片組裝

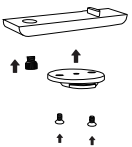

快拆轉接片與主機安裝

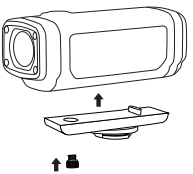

主机正装或倒装

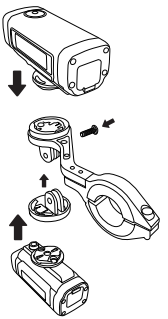

安裝主機

防水充電線和GPS線材的連接步驟：

1. 準備工作：確保所有配件齊全，包括機器、防水充電線（附贈）、GPS 充電線（另外購買）、線材鎖緊的螺絲、小螺絲刀。
2. 打開機器後蓋：打開機器尾部的後蓋，對準螺絲口和充電口的方向。
3. 插入充電線：將防水充電線插入機器的充電口，確保插到最底部，使充電口和線材的插口充分吻合
3. 連接供電：將充電線的另一端插入摩托車供電口或移動電源，確認連接正常，並開始充電。
4. 鎖緊線材和機器：使用附贈的螺絲和螺絲刀，將防水充電線和 GPS 線材鎖緊到機器上，確保連接牢固

＊確保GPS模塊附近無遮擋物,不要粘貼在金屬表面,且有GPS字樣面要朝上。

注意事項：

1. 在插入充電線時，小心確保插頭完全插入，避免造成不良連接。
2. 在鎖緊線材和機器時，適度用力，確保連接牢固，但避免過度緊固導致損壞
3. 如果使用移動電源供電，請確保電源充足，以保證記錄儀正常運行。

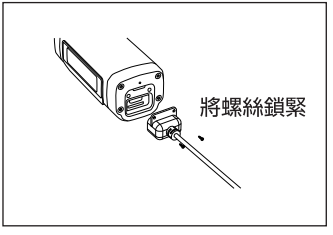

SD卡相關事項

SD 卡安裝步驟：

1. 先檢查包裝內容，SD 卡已預先安裝在記錄器中。
2. 確認 SD 卡位置，SD 卡插槽位於記錄儀的底部。
3. 打開 SD 卡插槽蓋，確保蓋子可以完全打開。
4. 檢查 SD 卡是否已正確插入插槽。確保卡片與插槽對齊，並輕輕按下直到 SD 卡被卡槽鎖定。
5. 關閉 SD 卡插槽蓋，確保蓋子牢固地鎖定，防止在行駛中意外打開。
6. 打開電源，檢查設備是否能夠正常讀取 SD 卡。在設備設置中確認 SD 卡的狀態。

SD 卡拆卸步驟：

1. 關閉摩托車記錄器電源
2. 打開 SD 卡插槽蓋輕輕按壓 SD 卡，直到它被彈出插槽。使用適當的方式，
確保不會損壞 SD 卡或插槽。小心取出 SD 卡，確保卡片安全存放或放回原包裝。
3. 關閉 SD 卡插槽蓋，確保蓋子牢固地鎖定，防止在行駛中意外打開。

注意事項：

1. 在拆卸 SD 卡之前，確保已經關閉電源，以避免可能的數據損壞。
2. 不要強行插入或拔出 SD 卡，以防止 SD 卡或插槽的損壞。
3. SD 卡是敏感的存儲設備，請避免在惡劣的環境中進行頻繁的插拔操作，以延長 SD 卡壽命。
4. 在 SD 卡插槽附近保持清潔，避免灰塵或雜物進入插槽，影響正常使用。

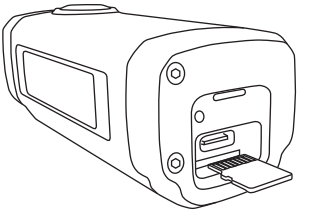

SD 卡插卡方向

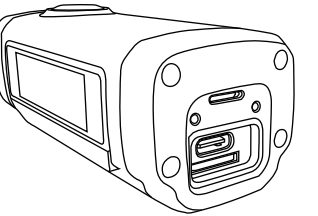

注意卡要插到底部

規格書

型號	AKY-710S
商品名稱	PRO BIKE CAMERA
分辨率	4K/2K/1080P
電源	5V 2A
鏡頭光圈	F1.6
廣角	142 度
防水防塵係數	IP66 相當
WIFI	2.4G
SD 卡	16GB～256GB ⩾UHSⅢ
電池容量	1800mAh
充電接口	USB Type-C
頻率	50Hz/60Hz
記錄方式	循環錄影/ 緊急錄影/ 停車監控錄影/ 拍照
錄音功能	支持
回放	手機 AKEEYO APP 回放 / 電腦回放 (Windows/iOS)
工作溫度範圍	-10℃~60℃
重量	主機重量101g /帶包裝約380g
正像/鏡像開關	默認開
上電自動開機	默認關 開關打開的情況下，通電直接開機錄像；開關關閉的情況下，通電只充電，需要手動按開機鍵開機

基本操作

機器狀態	機器和指示燈的反應
電源開 / 關	· 開機狀態下長按 3 秒震動 3 下關機 · 關機狀態下長按 3 秒震動 3 下開機
開始 / 停止錄影	· 正在錄影時短按 1 秒震動一下停止錄影 · 停止錄影時短按 1 秒繼續錄影
開 / 關 WiFi	· 短按 2 次電源鍵震動 2 下 Wi-Fi 開啟 /Wi-Fi 關閉 注意事項：Wi-Fi 出廠時默認是開啟。
關機狀態下連接 外接電源	· 自動開機震動 3 下，隨後進入錄影 拔掉電源線⇒震動 3 下自動關機
開機狀態下連接 外接電源：	· 機器無變化 拔掉電源線⇒震動 3 下自動關機
正在充電	· 綠燈亮；充電結束，綠燈消失。
循環錄影	· 指示燈閃紅燈，緩慢閃爍。
緊急錄影	· 長震動一下，指示燈閃紅燈，快速閃爍。
停車監控錄影	· 機器關機狀態下接收到碰撞，震動 3 下開機閃紅燈；錄影 30 秒後震動 3 下關機 注意事項：停車監控功能出廠默認是關閉狀態，使用這個功能需要在 APP 內將停車監控功能打開。
WIFI 指示燈顏色	打開 WiFi：藍燈常亮。 已連接 WiFi：藍燈緩慢閃爍。 斷開 WiFi：藍燈常亮。 關閉 WiFi：藍燈消失。
機器升級	藍燈快閃。
沒有插 SD 卡或者 沒有識別到 SD 卡	藍燈快閃。

注意:多個功能同時工作時會出現混色的情況。

不同像素和幀率下電池續航時間對照表

選項	充飽電情況續航時間	電量從0到100充電時間（5V~2A）
1080P@30fps/WIFI關掉	約5.5小時	約3小時
1080P@60fps/WIFI關掉	約4小時	
1080P@28fps/WIFI關掉	約6小時	
1080P@55fps/WIFI關掉	約5小時	
2K@60fps/WIFI關掉	約3.5小時	
2K@28fps/WIFI關掉	約5.5小時	
2K@55fps/WIFI關掉	約5小時	
4K@30fps/WIFI關掉	約3.5小時	
4K@28fps/WIFI關掉	約5小時	
1080P@30fps/WIFI打開	約4小時	
1080P@60fps/WIFI打開	約3.5小時	
1080P@28fps/WIFI打開	約4.5小時	
1080P@55fps/WIFI打開	約4小時	
2K@60fps/WIFI打開	約3小時	
2K@28fps/WIFI打開	約4小時	
2K@55fps/WIFI打開	約4小時	
4K@30fps/WIFI打開	約3.5小時	
4K@28fps/WIFI打開	約4小時	

註意:時間僅供參考

錄影功能

循環錄影

按住電源按鈕 3 秒開機，3 次振動後進入循環錄製模式。
當 SD 卡容量達到上限時，系統將自動覆蓋舊文件後繼續錄影。

緊急錄影

使用緊急錄影功能需要在 APP 內把撞擊靈敏度調成高 / 中 / 低

開機狀態下檢測到撞擊後，機器長震動一次，指示燈快閃，開始緊急錄影，錄影結束後自動進入循環錄影。緊急錄影文件不會被覆蓋。

注意事項：

1.G sensor 靈敏度設置成‘高’時，細微的衝擊都會觸發緊急錄影功能。

2. G sensor 靈敏度設置成‘低’時，只有受到強撞擊時才會觸發緊急錄影功能。

3. 緊急錄影保存的文件會被鎖定且不會被自動覆蓋，加鎖的文件增多時，請根據需要定期備份好文件後刪掉。（可以在手機 APP 上刪除或者用讀卡器連接電腦刪除或者直接用附贈的充電線連接電腦刪除。）

4. 緊急錄影記錄的文件在 SD 卡的 Event 文件夾。

停車監控功能錄影

1. 在手機 APP 上把停車監控功能打開

2. 機器關機狀態下接收到碰撞，震動 3 下開機閃紅燈；錄影 30 秒後

震動 3 下關機、停車監控錄影保存的文件會被鎖定且不會被自動覆蓋，加鎖的文件增多時，請根據需要定期備份好文件後刪掉。（可以在手機 APP 上刪除或者用讀卡器連接電腦刪除或者直接用附贈的充電線連接電腦刪除。）

3. 停車監控記錄的文件在 SD 卡的【parking_monitoring】文件夾。

注意事項：

使用停車監控功能時，必須在 APP 上把 G-sensor 靈敏度設置成高 / 中 / 低。

拍照：

通過 WiFi 連接手機 APP，在手機 APP 上點拍照按鈕。

注意事項：拍照功能只能通過手機 APP 操作實現。

WiFi 和 APP 的簡單介紹

AKEEYO APP可以通過WiFi將AKY-710S和手機連接,通過手機進行實時顯示錄影內容,對錄影的文件進行回放、編輯、下載、刪除、分享等操作,另外還可以對機器的參數進行設定。

安裝 APP

①掃描下面的QR-Code

②App Store

App Store
からダウンロード

AKEEYO 搜索

安裝後的操作步驟

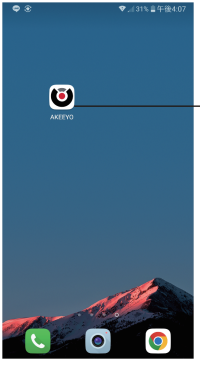

下載好後在手機界面上點開APP

WiFi 和 APP 的簡單介紹

註冊方法

1

2

3

4

WiFi 和 APP 的簡單介紹

5

6

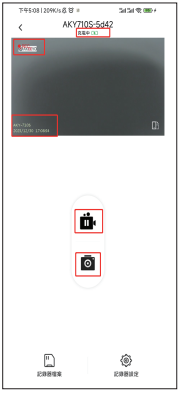

7

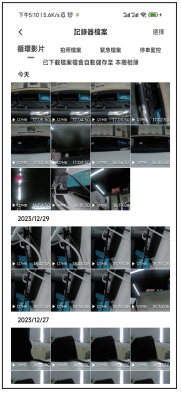

8

WiFi 和 APP 的簡單介紹

下載和編輯影片

9

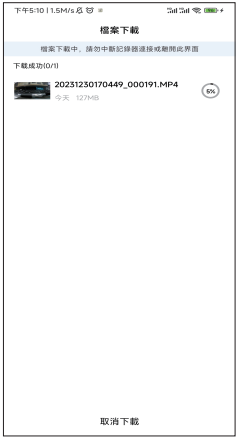

10

11

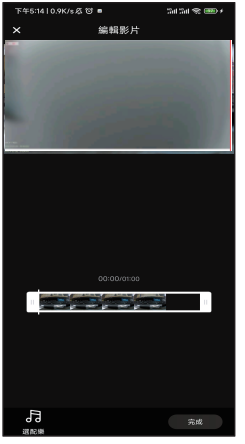

①可以調整下載的影片回放速度

（1 秒一幀 /0.2x/0.5x/1.0x/3.0x/10.0x)

②下載的影片可以進行分享、編輯、截圖和刪除

③影片編輯完成後，點擊【完成】進行保存後可以在本地相簿進行確認

WiFi 和 APP 的簡單介紹

本地相簿

⓬

點擊本機相簿

⓭

下載和編輯的影片
會保存在這裡

APP 內可設置的項目

錄影聲音	開 / 關
影像解析度	4K/2K/1080P
影片長度	關/1 分鐘 /3 分鐘 /5 分鐘 *備註*:如果選擇關閉循環檔案覆蓋,將變成為5分鐘一個錄影檔案,記憶卡錄製滿了之後不進入循環覆蓋。
光源頻率	50Hz/60Hz
曝光補償	-2.0 ～ +2.0
影片浮水印	開 / 關
鏡頭方向	上下翻轉打開 / 關閉
碰撞感應	關 / 低 / 中 / 高
停車監控	關 / 開
記錄儀 WiFi 名稱	可自定義修改
記錄儀 WiFi 密碼	可自定義修改，初始密碼是 12345678
韌體版本	軟體的版本號
格式化記憶卡	將卡進行格式化，刪除卡內所有信息
恢復原廠設置	將機器的設置恢復出廠值
縮時錄影	關/1秒1幀/2秒1幀/5秒1幀
延遲關機	關/5分鐘/30分鐘/1小時

注意:連接GPS線使用時,可以在APP設置當地時區信息。

回放錄影的文件或者照片

下載專用的影片播放器

①關閉機器的電源，將卡 SD 卡緩慢拿出來。
②用讀卡器連接上電腦。
③電腦識別到 SD 卡後，點擊 SD 卡內的「gxplayer」文件、根據下方指示步驟安裝專用影片播放器。
④選擇需要回放的影片文件、在電腦上進行回放。







Windows 系統回放

對應 OS：Windows7、Windows8.1、Windows10
①關閉機器的電源，將 SD 卡緩慢拿出來。
②用讀卡器連接上電腦。
③SD 卡內有「Event」「Normal」「parking_monitoring」「Photo」4 個文件夾。
④選擇需要回放的影片文件、在電腦上進行回放。

Mac 系統回放

對應 OS：Mac OSX10.3.6 以下
①關閉機器的電源，將 SD 卡緩慢拿出來。
②用讀卡器連接上電腦。
③SD 卡內有「Event」「Normal」「parking_monitoring」「Photo」4 個文件夾。
④選擇需要回放的影片文件、在電腦上進行回放。

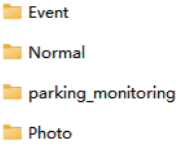

播放器介面

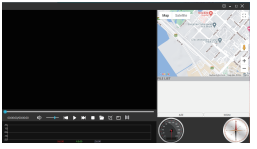

恢復出廠設置

1. 手動按壓重置鍵

當機器出現卡機或者反應錯誤時，可以通過按壓機器底部的重置鍵對機器進行強制關機。但是機器不會恢復出廠設置。

2. 在手機 APP 上恢復出廠設置

在手機 APP 設置項目點擊「恢復出廠設置」後、機器的所有設定都會恢復初始值。

3. 在錄影暫停的狀態下，連續按5次電源鍵，設備會關機並重新啓動，並將設置為出廠設定。

手動按壓重置鍵

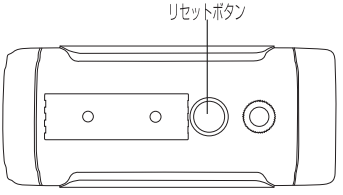

APP 出廠設置

軟體版本升級

APP 自動檢測升級（OTA）

1、使用者首次使用 App 時，連接裝置到裝置的 WiFi，完成裝置添加和裝置的硬體版本號取得；

2、使用者在手機連接互聯網的情況下，再次打開 App，此時 App 會用已添加裝置的硬體版本號連接雲端請求是否有新版本；

3、如果有新版本，App 會彈框提示升級；

手動確認可升級版本

APP 內點 [更多]→[關於]→[版本更新]、可以手動確認新版本升級。

注意事項：檢測出新版本和下載新版本這個過程，手機需要連接上互聯網。

故障排查

問 題	排查步驟
無法正常啟動	1. 確保電源線連接正確；2. 檢查電池電量，嘗試使用充電器充電； 3. 聯繫售後服務。
錄影品質差	1. 檢查鏡頭是否清潔；2. 確認 SD 卡有足夠可用空間； 3. 調整錄影分辨率和設定。
錄影文件損壞或 無法播放	1. 確保 SD 卡讀寫速度足夠；2. 使用另一個影片播放器打開文件； 3. 檢查 SD 卡是否需要格式化。
自動關機或重新啟動	1. 檢查電源連接是否牢固；2. 確認電源線無故障；3. 嘗試更新硬體； 4. 聯繫售後服務。
錄影文件遺失	1. 檢查 SD 卡是否受損；2. 確保錄影文件保存路徑正確；
無法連接手機或 Wi-Fi 連接問題	1. 確保 Wi-Fi 密碼正確；2. 重新啟動行車記錄器和手機； 3. 更新應用程式版本；4. 檢查行車記錄儀的 Wi-Fi 是否已開啟。
錄影過暗或者過亮	1. 調整攝影鏡頭曝光值；2. 檢查並清理攝影鏡頭； 3. 調整錄影環境的光照條件。
SD 卡錯誤提示	1. 檢查SD卡是否正確插入；2. 確保 SD 卡沒有損壞； 3. 嘗試用電腦檢查和修復SD卡錯誤；4. 如果沒有改善請更換 SD 卡。
無法使用停車監控功能	1. 確保停車監控功能已在設置中啟用； 2.. 確保 SD 卡容量足夠支持停車監控； 3. 檢查停車監控模式的設置，如靈敏度和錄影時長； 4. 如果問題仍然存在，請聯繫售後服務。

免責聲明

親愛的用戶，感謝您選購我們的摩托車記錄器產品。為確保您在使用產品時獲得最佳體驗，請在使用前細閱以下免責聲明：

1. 本產品僅供您個人使用，請確保在法律允許的範圍內使用。禁止任何非法或違反當地法規的用途。
2. 在使用本產品時，請遵從道路交通法規，並隨時保持良好的駕駛習慣。記錄器的存在不免除您對行車安全的責任。
3. 本產品可能在特殊情況下無法正確記錄，例如極端天氣條件或視覺受阻礙的情況。請保持謹慎，並依賴其他交通工具的信息。
4. 請注意，本產品的性能可能會受到 SD 卡質量、記錄儀設置等多種因素的影響。請確保使用高質量的 SD 卡，並定期檢查和調整設置。
5. 使用本產品時，請勿將其安裝在可能影響行車安全的位置，並避免在行車中進行操作，以免發生事故。
6. 請根據手冊中的說明進行正確的安裝和操作，以確保產品的正常使用。我們不對由於不當使用或操作而引起的損壞負責。
7. 如在使用過程中遇到任何故障或問題，請立即停止使用並聯繫我們的售後服務進行協助。
8. 感謝您對我們產品的信任，我們期待您在使用中享受到便捷和安全。